

Programmierblatt Youjie YJ-HF600 USB

1



DEFOVR.

Remove Custom Defaults

2



DEFAULT.

Activate Defaults

3



TERMD130.

USB Serial Port Emulation

4



232BAD6.

19200

5



232WRD2.

*** 8 Data, 1 Stop, Parity None**

6



PAPPSC.

**Presentation Mode - Mobile
Phone**

7



PRECA2.

Clear All Prefixes

8



SUFBK2.

Add Suffix

9



KOK

0

Programmierblatt Youjie YJ-HF600 USB

10



KDK

D

11

Interleaved 2 of 5 On/Off



I25ENA1.

* On

12



I25CK22.

Validate and Transmit

13



I25MIN.

Minimum Message Length

14



I2K

2


15



KDK

0

16

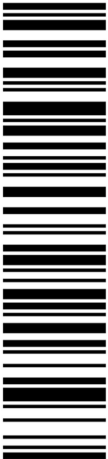

I25MAX.

Maximum Message Length

17



I2K

2


18



I4K

4

Programmierblatt Youjie YJ-HF600 USB

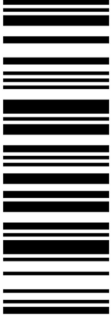25 Code39 on Optional  C39ENA1. * On	22  KOK 0	19 QR Code On/Off  QRCENA1. * On
26 Code39 off Optional  C39ENAO. Off	23 Code 128 On/Off  128ENAO. Off	20  QRCMIN. Minimum Message Length
27 Add CR Suffix All Symbolologies  VSUFCR.	24 Nur für Blausee Code 128 On/Off  128ENA1. * On	21  K2K 2

Programmierblatt Youjie YJ-HF600 USB

