

Programmierblatt Zebra DS9908

Zebra DS9908




1



Set Factory Defaults

2

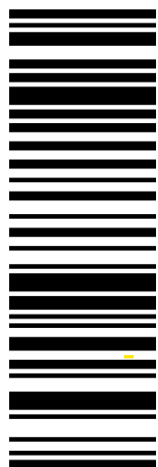

**Low Volume
(2)**